

Keyboard

KA-C581+MA-H333+G5 KM-C581

KA SERIES : Wireless 2.4GHz Keyboard
KM SERIES : Multimedia Keyboard



KA-C581



KM-C581



Features

- Easy installation : plug & play
- Auto power saving mode
- Windows® XP/Vista/7/8 compatible
- PC USB fully compatible
- Works at full 360° up to 8 meters with 2.4GHz RF technology
- Multi-channel design supports 16777216 IDs for improved performance

Mouse Specification

- Use optical + RF-Wireless technology
- Super high sensitivity with 1000 DPI
- No Line-Of-Sight Required, fully 360 degree operation
- Low power indicator : Flash light to remind you to change batteries
- Advanced optical sensing technology
- Sleeping mode design save power consumption
- Ergonomic shape
- Easy to install, Just Plug & Play
- Frequency: 2.4 GHz
- Two AAA ALKALINE batteries
- 16777216 ID auto identification
- Effective distance: 8M
- Battery Life-Mouse: up to 20 days (2hr/day)
- Windows® XP/Vista/7/8 compatible
- Dimension: 98(L)x59(W)x36(H) mm

Packing Information

	Packing	CUFT.	20FT	40FT	40HQ
KM-5C81	- Pcs/Ctn.	-	-	-	-
KA-5C81-2 in 1	- Pcs/Ctn.	-	-	-	-

Keyboard Specification

- Glossy & ergonomic chocolate keycap keyboard
- Provides 13 internet/Media hot keys
- Designed for enhanced Windows® 98SE/2000 key layout
- High quality membrane tactile key switch available
- User friendly design for anti-RSI (Repetitive Strain Injure)
- 2 AAA batteries, over 380 hrs
- Switch reliability: Over 3 millions
- Dimension: 454 (L) x 167 (W) x 26 (H) mm

Hot Key Spec

- ⌂ Media — Press this button to activate "Windows Media Player".
- ⏮ Play/Pause — Press this button to begin playing a CD or a video file (or to restart after pause). During playback press this key to pause the playback, press it again to resume playback on current position.
- ⏹ Stop — Press this button to stop playing the media.
- ⏪ Previous — Press this button to set media back by one track.
- ⏩ Next — Press this button to instruct the CD player to queue up beginning of the next track. During playback in a video file. Depress this button to cause the player to fast forward.
- ⏴ -Volume — Press this button to decrease volume.
- ⏵ +Volume — Press this button to increase volume.
- 🔇 Mute — Press this button to mute sound. Press it again to resume sound.
- 📖 Favorites — Press this button to bring up "My Favorite Window". Press this button again to close "My Favorite Window".
- ✉ Mail — Press this button to activate the e-mail system.
- 🏠 Web/Home — Press this button to go to the default Home Page.
- 🔄 Refresh — Press this button to update the current page.
- 🔍 Search — Press this button to bring up "Search Windows" for Web address Press this button again to close "Search Windows".