

Wireless 2 In 1 Combo

KA-1781+MA/MD-W633+G5 MA/MD-C233

KA SERIES : Wireless 2.4GHz Keyboard



Features

- Easy installation: plug & play
- Auto power saving mode
- Windows® XP/Vista/7/8 compatible
- PC USB fully compatible
- Works at full 360° up to 8 meters with 2.4GHz RF technology
- Multi-channel design supports 16777216 IDs for improved performance

Keyboard Specification

- Provides 15 Media hot keys and glossy design with optimum ease of use and maximum functions
- Designed for enhanced Windows® 98SE/2000 key layout
- High quality membrane tactile key switch available
- 2 AAA batteries, over 380 hrs
- Switch reliability: Over 3 millions
- Dimension: 403(L) x 147(W) x 18(H) mm

Mouse Specification

- Use laser + RF-Wireless technology (MD)
- Use optical + RF-Wireless technology (MA)
- Super high sensitivity with 1600 DPI (MD)
- Super high sensitivity with 1600 DPI (MA)
- Using 2.4GHz RF technology with theoretical operating distance up to 8 meters
- Low power indicator : Flash light to remind you to change batteries
- Advanced optical sensing technology
- Sleeping mode design save power consumption
- Ergonomic shape
- Easy to install, Just Plug & Play
- Frequency : 2.4 GHz
- Two AAA ALKALINE batteries
- 16777216 ID auto identification
- Battery Life-Mouse: up to 20 days (2hr/day)
- Windows® XP/Vista/7/8 compatible
- Dimension:
 - MA/MD-W633: 95(L)x54(W)x35.5(H) mm
 - MA/MD-C233: 98(L)x59(W)x35(H) mm

Hot Key Spec

- ⏪ Back — Press this button to go to previous page.
- ⏩ Forward — Press this button to go to next page.
- ⏹ Stop — Press this button to stop current transmission.
- 📖 My Favorites — Press this button to bring up "My Favorite Window". Press this button again to close "My Favorite Window".
- ⏮ Previous — Press this button to set media back by one track.
- 🔊 -Volume — Press this button to decrease volume.
- 🔇 Mute — Press this button to mute sound. Press it again to resume sound.
- ⏸ Play/Pause — Press this button to begin playing a CD or a video file (or to restart after pause). During playback press this key to pause the playback, press it again to resume playback on current position.
- ⏹ Stop — Press this button to stop playing the media.
- 🔊 +Volume — Press this button to increase volume.
- ⏭ Next — Press this button to instruct the CD player to queue up beginning of the next track. During playback in a video file. Depress this button to cause the player to fast forward.
- 🔍 Search — Press this button to bring up "Search Windows" for Web address. Press this button again to close "Search Windows".
- 🏠 Home — Press this button to go to the default Home Page.
- ✉ E-Mail — Press this button to activate the e-mail system.
- 🌙 Sleep — On computers with a power management program, the "Sleep" Hot Key enables you to : Start your screen saver / Log off Windows / Shut down Windows.

Packing Information

	Packing	CUFT.	20FT	40FT	40HQ
KA-1781-2 in 1	20 Pcs/Ctn.	3.21'	6000	12400	15040