

# Wireless 2 In 1 Combo

## KA-3381+MA/MD-W633+G5 MA/MD-C233

KA SERIES : Wireless 2.4GHz Keyboard



### Features

- Easy installation : plug & play
- Auto power saving mode
- Windows® XP/Vista/7/8 compatible
- PC USB fully compatible
- Works at full 360° up to 8 meters with 2.4GHz RF technology
- Multi-channel design supports 16777216 IDs for improved performance

### Mouse Specification

- Use laser + RF-Wireless technology (MD)  
Use optical + RF-Wireless technology (MA)
- Super high sensitivity with 1600 DPI (MD)  
Super high sensitivity with 1600 DPI (MA)
- Using 2.4GHz RF technology with theoretical operating distance up to 8 meters
- Low power indicator : Flash light to remind you to change batteries
- Advanced optical sensing technology
- Sleeping mode design save power consumption
- Ergonomic shape
- Easy to install, Just Plug & Play
- Frequency : 2.4 GHz
- Two AAA ALKALINE batteries
- 16777216 ID auto identification
- Battery Life-Mouse : up to 20 days (2hr/day)
- Windows® XP/Vista/7/8 compatible
- Dimension :  
MA/MD-W633 : 95(L)x54(W)x35.5(H) mm  
MA/MD-C233 : 98(L)x59(W)x35(H) mm

### Packing Information

	Packing	CUFT.	20FT	40FT	40HQ
KA-3381-2 in 1	20 Pcs/Ctn.	3.20'	6380	13620	15520

### Keyboard Specification

- Silvery hot keys and glossy design with optimum ease of use and maximum functions
- Provides 9 internet / Media hot keys
- Designed for enhanced Windows® 98SE / 2000 key layout
- High quality membrane tactile key switch available
- 2 AAA batteries, over 380 hrs
- Switch reliability : Over 3 millions
- Dimension : 460(L)x 160(W)x 22(H) mm

### Hot Key Spec

- ☾ Sleep \_\_\_\_\_ On computers with a power management program, the "Sleep" Hot Key enables you to : Start your screen saver / Log off Windows / Shut down Windows.
- ⏪ Back \_\_\_\_\_ Press this button to go to previous page.
- ⏩ Forward \_\_\_\_\_ Press this button to go to next page.
- 📌 Favorites \_\_\_\_\_ Press this button to bring up "My Favorite Window". Press this button again to close "My Favorite Window".
- 🏠 Web/Home \_\_\_\_\_ Press this button to go to the default Home Page.
- ✉ Mail \_\_\_\_\_ Press this button to activate the e-mail system.
- ⏮ Previous \_\_\_\_\_ Press this button to set media back by one track.
- ⏸ Play/Pause \_\_\_\_\_ Press this button to begin playing a CD or a video file (or to restart after pause). During playback press this key to pause the playback, press it again to resume playback on current position.
- ⏭ Next \_\_\_\_\_ Press this button to instruct the CD player to queue up beginning of the next track. During playback in a video file. Depress this button to cause the player to fast forward. Press this button to activate "Windows Media Player". Press this button to activate "Windows Calculator". Press this button to open "My computer".