

Wireless 2 In 1 Combo

KA-C681+MA-8E33+G5

KA SERIES : Wireless 2.4GHz Keyboard



Features

- Easy installation: plug & play
- Auto power saving mode
- Windows® XP/Vista/7/8 compatible
- PC USB fully compatible
- Works at full 360° up to 8 meters with 2.4GHz RF technology
- Multi-channel design supports 16777216 IDs for improved performance

Keyboard Specification

- Scissor structure
- Mini chocolate keyboard with 16 internet/Media hot keys
- Designed for enhanced Windows® 98SE/2000 key layout
- High quality membrane tactile key switch available
- Glossy surface with colorful silion decoration
- 2 AAA batteries, over 380 hrs
- Switch reliability: Over 5 millions
- Dimension: 272(L) x 133(W) x 22(H) mm

Mouse Specification

- Use optical + RF-Wireless technology
- Super high sensitivity with 1600 DPI
- Using 2.4GHz RF technology with theoretical operating distance up to 8 meters
- Low power indicator: Flash light to remind you to change batteries
- Advanced optical sensing technology
- Sleeping mode design save power consumption
- Double materials surface
- Easy to install, Just Plug & Play
- Frequency: 2.4 GHz
- Two AAA ALKALINE batteries
- 16777216 ID auto identification
- Battery Life-Mouse : up to 20 days (2hr/day)
- Windows® XP/Vista / 7/8 compatible
- Dimension: 99(L)x57(W)x39(H) mm

Hot Key Spec

- ⏪ Back — Press this button to go to previous page.
- ⏩ Forward — Press this button to go to next page.
- ⌫ Stop — Press this button to stop current transmission.
- 🔄 Refresh — Press this button to update the current page.
- 🔍 Search — Press this button to bring up "Search Windows" for Web address Press this button again to close "Search Windows".
- 📌 Favorites — Press this button to bring up "My Favorite Window". Press this button again to close "My Favorite Window".
- 🏠 Web/Home — Press this button to go to the default Home Page.
- ✉ Mail — Press this button to activate the e-mail system.
- 🔇 Mute — Press this button to mute sound. Press it again to resume sound.
- 🔊 -Volume — Press this button to decrease volume.
- 🔊 +Volume — Press this button to increase volume.
- 🎵 Media — Press this button to activate "Windows Media Player".
- ⏮ Previous — Press this button to set media back by one track.
- ⏹ Stop — Press this button to stop playing the media.
- ⏸ Play/Pause — Press this button to begin playing a CD or a video file (or to restart after pause). During playback press this key to pause the playback, press it again to resume playback on current position.
- ⏭ Next — Press this button to instruct the CD player to queue up beginning of the next track. During playback in a video file. Depress this button to cause the player to fast forward.

Packing Information

	Packing	CUFT.	20FT	40FT	40HQ
KA-C681-2 in 1	- Pcs/Ctn.	-	-	-	-