

# Bluetooth Keyboard

## KT-C381

KT SERIES : Wireless Bluetooth Keyboard



### Features

- Compliant with Bluetooth 3.0
- Sleeping mode design save power consumption
- LED indicator to show Bluetooth link status
- Works at full 360° up to 8 meters
- Works with Bluetooth enabled devices (PC/Notebook/Pad/Phone)
- Windows® XP/Vista/7/8, Android 3 compatible

### Specification

- Glossy & mini chocolate keycap with 19 internet / Media hot keys
- High quality membrane tactile key switch available
- Switch reliability : Over 3 millions
- Dimension : 315(L) x 128(W) x 26(H) mm

### Packing Information

	Packing	CUFT.	20FT	40FT	40HQ
KT-C381	30 Pcs/Ctn.	2.20'	13530	28140	32580

### Hot Key Spec

Press "Fn" key with the hot keys to activate the functions.

- ⏪ Back — Press this button to go to previous page.
- ⏩ Forward — Press this button to go to next page.
- ⏹ Stop — Press this button to stop current transmission.
- 🔄 Refresh — Press this button to update the current page.
- 🔍 Search — Press this button to bring up "Search Windows" for Web address Press this button again to close "Search Windows".
- 📁 Favorites — Press this button to bring up "My Favorite Window". Press this button again to close "My Favorite Window".
- 🏠 Web/Home — Press this button to go to the default Home Page.
- ✉ Mail — Press this button to activate the e-mail system.
- 🔇 Mute — Press this button to mute sound. Press it again to resume sound.
- 🔊 -Volume — Press this button to decrease volume.
- 🔊 +Volume — Press this button to increase volume.
- 🎵 Media — Press this button to activate "Windows Media Player".
- 🧮 Calculator — Press this button to activate "Windows Calculator".
- 💻 My computer — Press this button to open "My computer".
- ⏮ Previous — Press this button to set media back by one track.
- ⏸ Stop — Press this button to stop playing the media.
- ⏸ Play/Pause — Press this button to begin playing a CD or a video file (or to restart after pause). During playback press this key to pause the playback, press it again to resume playback on current position.
- ⏭ Next — Press this button to instruct the CD player to queue up beginning of the next track. During playback in a video file. Depress this button to cause the player to fast forward.
- 🌙 Sleep — On computers with a power management program, the "Sleep" Hot Key enables you to : Start your screen saver / Log off Windows / Shut down Windows.